AOC

LCD Monitor User Manual

e2236Vwa

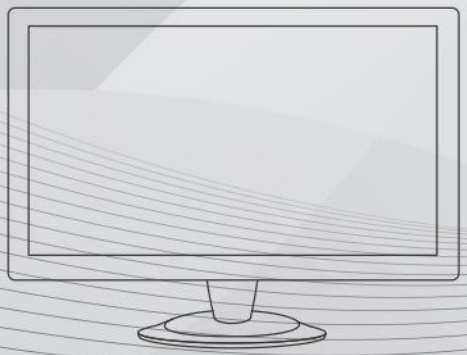

Downloaded from ManualMonitor.com Manuals

Safety....4
National Conventions....4
Power....5
Installation....6
Cleaning....8
Other....9
Setup....10
Contents in Box....10
Setup Stand & Base....11
Adjusting Viewing Angle....12
Connecting the Monitor....13
Wall Mounting....14
Adjusting....15
Setting Optimal Resolution....15
Windows Vista....15
Windows XP....17
Windows ME/2000....18
Hotkeys....19
OSD Setting....20
Eco mode....21
Color Boost....23
Luminance....25
Image Setup....27
Color Temperature....29
Picture Boost....31
Extra Setting....33
Exit....35
LED Indicator....36
Driver....37
Monitor Driver....37
Windows 2000....37
Windows ME....37
Windows XP....38
Windows Vista....41
Windows 7....43
i-Menu....47
Troubleshoot....48
Specification....50
General Specification....50
Preset Display Modes....51
Pin Assignments....52
Plug and Play....54
Regulation....55
FCC Notice....55
WEEE Declaration....56
EPA Energy Star....56

Downloaded from ManualMonitor.com Manuals

EPEAT Declaration 57
Service 58
Warranty Statement for Europe 58
Warranty Statement for North & South America (excluding Brazil) 60

Downloaded from ManualMonitor.com Manuals

Safety

National Conventions

The following subsections describe notational conventions used in this document.

Notes, Cautions, and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold type or in italic type. These blocks are notes, cautions, and warnings, and they are used as follows:

NOTE: A NOTE indicates important information that helps you make better use of your computer system.

CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

WARNING: A WARNING indicates the potential for bodily harm and tells you how to avoid the problem.Some warnings may appear in alternate formats and may be unaccompanied by an icon. In such cases, the specific presentation of the warning is mandated by regulatory authority.

Downloaded from ManualMonitor.com Manuals

Power

The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.

The monitor is equipped with a three-pronged grounded plug, a plug with a third (grounding) pin. This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or use an adapter to ground the appliance safely. Do not defeat the safety purpose of the grounded plug.

Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges.

Do not overload power strips and extension cords. Overloading can result in fire or electric shock.

To ensure satisfactory operation, use the monitor only with UL listed computers which have appropriate configured receptacles marked between 100 - 240V AC, Min. 5A

The wall socket shall be installed near the equipment and shall be easily accessible.

For use only with the attached power adapter (Output 12Vdc) which have UL,CSA listed license (Only for monitors with power adapter).

Downloaded from ManualMonitor.com Manuals

Installation

Do not place the monitor on an unstable cart, stand, tripod, bracket, or table. If the monitor falls, it can injure a person and cause serious damage to this product. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with this product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer. A product and cart combination should be moved with care.

Never push any object into the slot on the monitor cabinet. It could damage circuit parts causing a fire or electric shock. Never spill liquids on the monitor.

Do not place the front of the product on the floor.

If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions.

Leave some space around the monitor as shown below. Otherwise, air-circulation may be inadequate hence overheating may cause a fire or damage to the monitor.

See below the recommended ventilation areas around the monitor when the monitor is installed on the wall or on the stand:

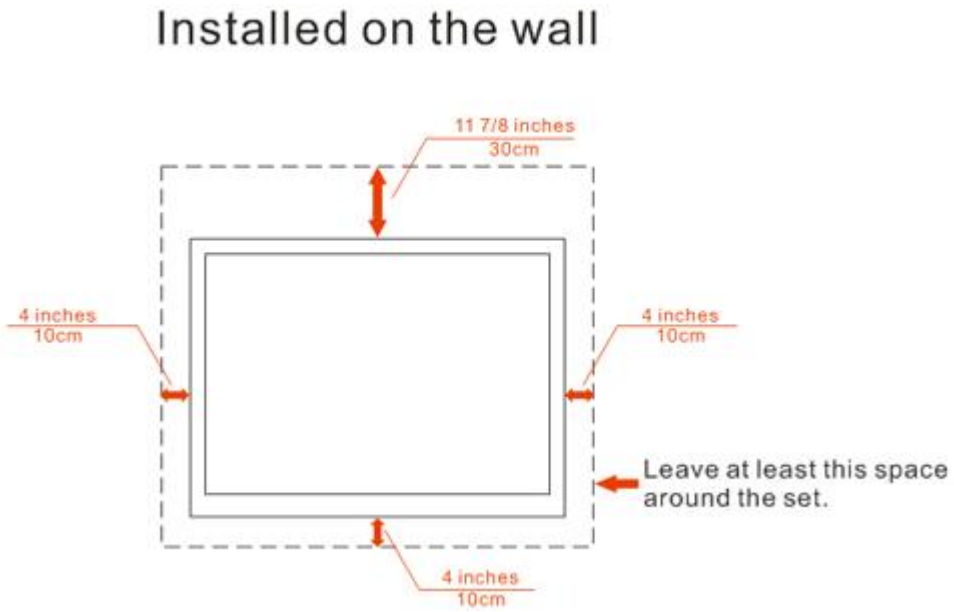

Downloaded from ManualMonitor.com Manuals

Installed with stand

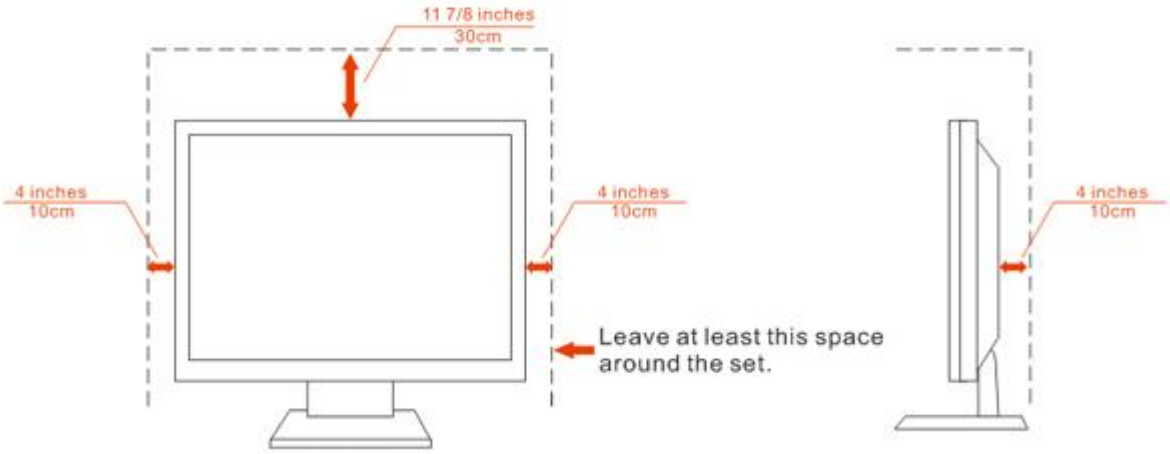

Downloaded from ManualMonitor.com Manuals

Cleaning

Clean the cabinet regularly with the cloth provided. You can use soft-detergent to wipe out the stain, instead of strong-detergent which will cauterize the product cabinet.

When cleaning, make sure no detergent is leaked into the product. The cleaning cloth should not be too rough as it will scratch the screen surface.

Please disconnect the power cord before cleaning the product.

Downloaded from ManualMonitor.com Manuals

Other

If the product is emitting a strange smell, sound or smoke, disconnect the power plug IMMEDIATELY and contact a Service Center.

Make sure that the ventilating openings are not blocked by a table or curtain.

Do not engage the LCD monitor in severe vibration or high impact conditions during operation.

Do not knock or drop the monitor during operation or transportation.

Downloaded from ManualMonitor.com Manuals

Setup

Contents in Box

Monitor

QSG CD Manual Screw Monitor Base Stand

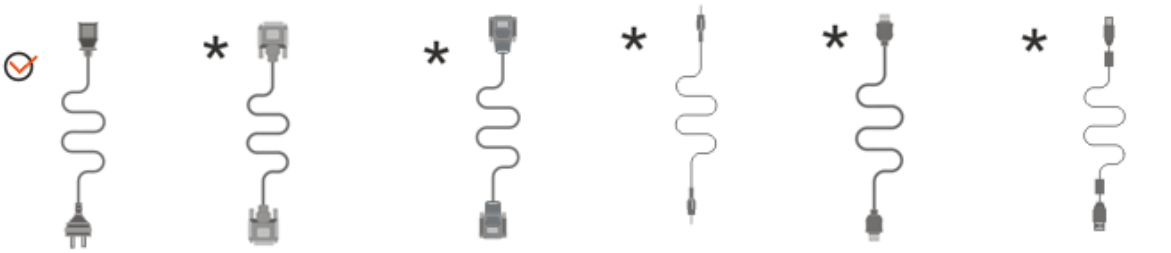

Power Cable DVI Cable Analog Cable Audio Cable HDMI Cable USB Cable

*Not all signal cables (Analog, DVI, USB, Audio, and HDMI cables) will be provided for all countries and regions. Please check with the local dealer or AOC branch office for confirmation.

Downloaded from ManualMonitor.com Manuals

Setup Stand & Base

Please setup or remove the base following the steps as below.

Setup:

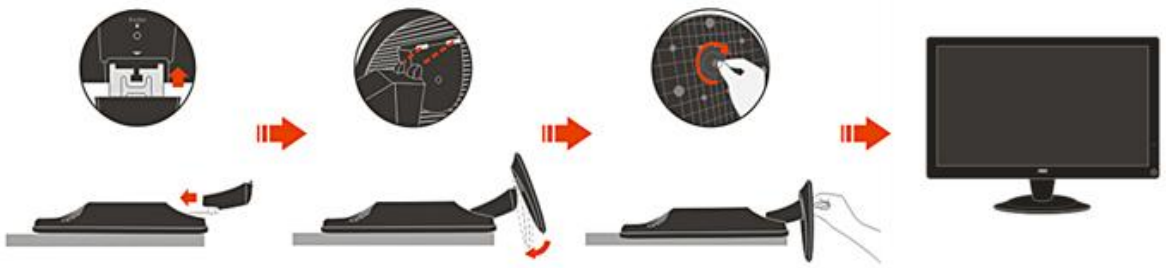

Remove:

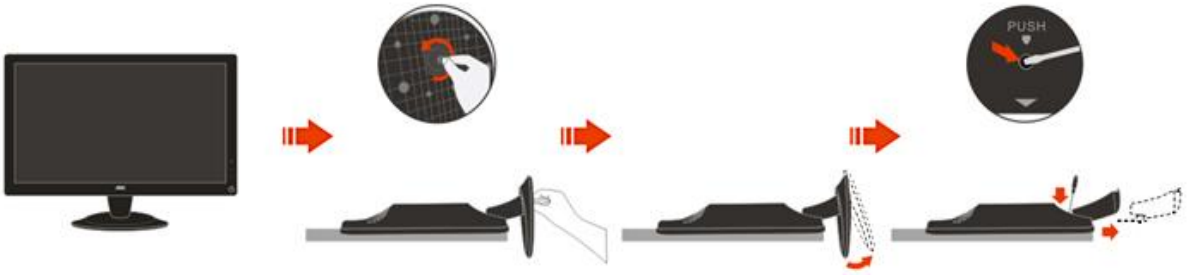

Downloaded from ManualMonitor.com Manuals

Adjusting Viewing Angle

For optimal viewing it is recommended to look at the full face of the monitor, then adjust the monitor's angle to your own preference.

Hold the stand so you will not topple the monitor when you change the monitor's angle.

You are able to adjust the monitor's angle from -5° to 20 °.

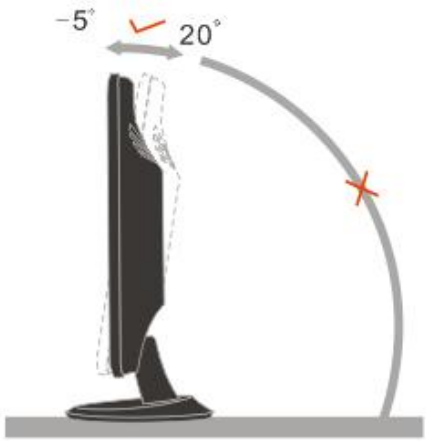

NOTE:

Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.

Downloaded from ManualMonitor.com Manuals

Connecting the Monitor

Cable Connections On Back of Monitor and Computer:

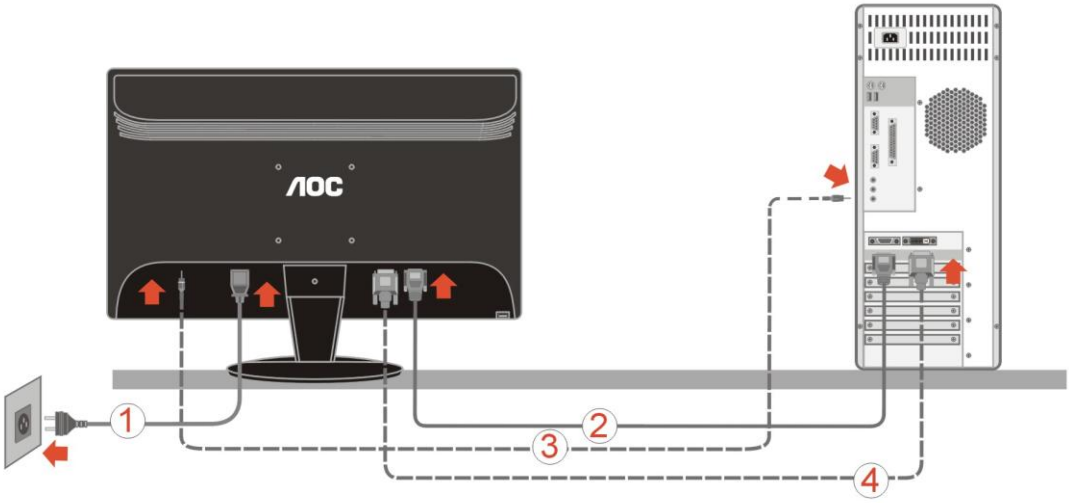

1. Power
2. Analog (DB-15 VGA cable)
3.Audio
4.DVI

To protect equipment, always turn off the PC and LCD monitor before connecting.

1 Connect the power cable to the AC port on the back of the monitor.
2 Connect one end of the 15-pin D-Sub cable to the back of the monitor and connect the other end to the computer's D-Sub port.
3 Connect the audio cable to audio in port on the back of the monitor.
4 (Optional – Requires a video card with DVI port) - Connect one end of the DVI cable to the back of the monitor and connect the other end to the computer’s DVI port.
5 Turn on your monitor and computer.

If your monitor displays an image, installation is complete. If it does not display an image, please refer Troubleshooting.

Downloaded from ManualMonitor.com Manuals

Wall Mounting

Preparing to Install An Optional Wall Mounting Arm.

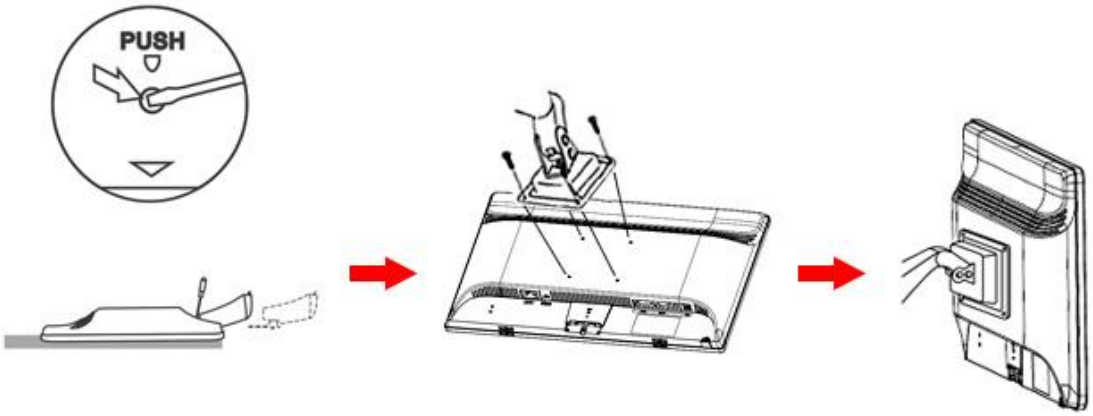

This monitor can be attached to a wall mounting arm you purchase separately. Disconnect power before this procedure. Follow these steps:

1 Remove the base.
2 Follow the manufacturer's instructions to assemble the wall mounting arm.
3 Place the wall mounting arm onto the back of the monitor. Line up the holes of the arm with the holes in the back of the monitor.
4 Insert the 4 screws into the holes and tighten.
5 Reconnect the cables. Refer to the user's manual that came with the optional wall mounting arm for instructions on attaching it to the wall.

Noted : VESA mounting screw holes are not available for all models, please check with the dealer or official department of AOC.

Distance between the wall-mount holes : 100 x 100 mm

Screw specification for wall-mount : M4 x 10

Downloaded from ManualMonitor.com Manuals

Adjusting

Setting Optimal Resolution

Windows Vista

For Windows Vista:

1 Click **START.**

2 Click **CONTROL PANEL.**

3 Click **Appearance and Personalization.**

4 Click **Personalization**

Downloaded from ManualMonitor.com Manuals

5 Click **Display Settings.**

6 Set the resolution **SLIDE-BAR** to 1920 by 1080.

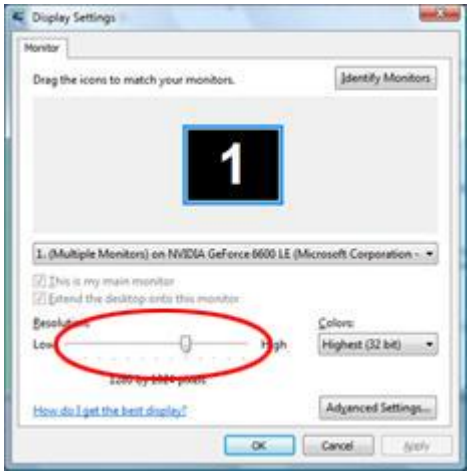

Downloaded from ManualMonitor.com Manuals

Windows XP

For Windows XP:

1 Click **START.**

2 Click **SETTINGS.**

3 Click **CONTROL PANEL.**

4 Click **Appearance and Themes.**

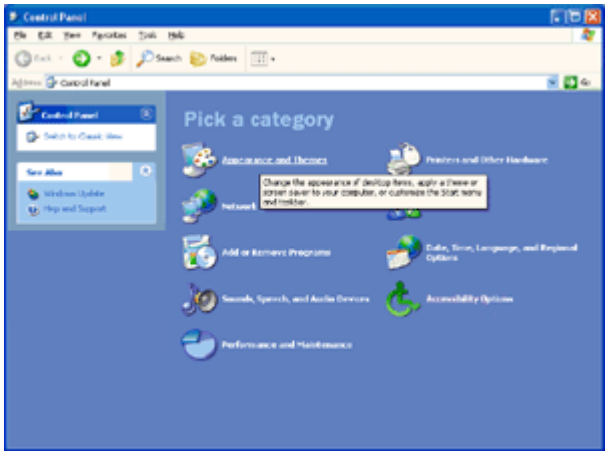

5 Double click **DISPLAY.**

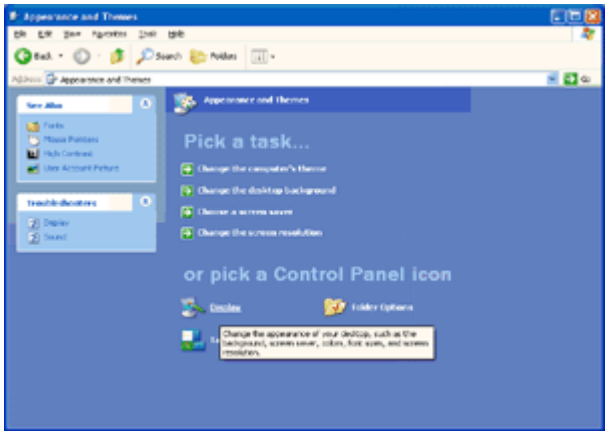

Downloaded from ManualMonitor.com Manuals

6 Click **SETTINGS.**

7 Set the resolution **SLIDE-BAR** to 1920 by 1080.

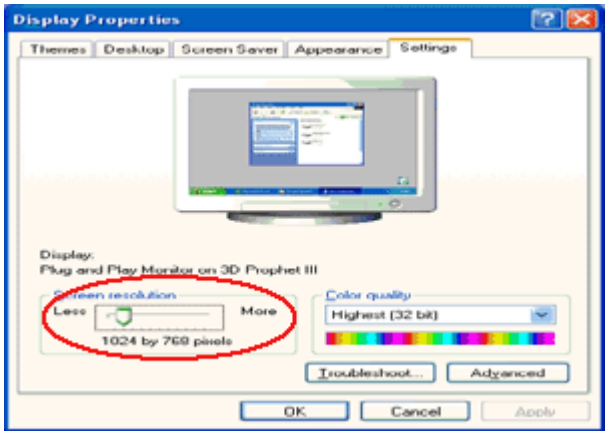

Windows ME/2000

For Windows ME/2000:

1 Click **START.**

2 Click **SETTINGS.**

3 Click **CONTROL PANEL.**

4 Double click **DISPLAY.**

5 Click **SETTINGS.**

6 Set the resolution **SLIDE-BAR** to 1920 by 1080.

Downloaded from ManualMonitor.com Manuals

Hotkeys

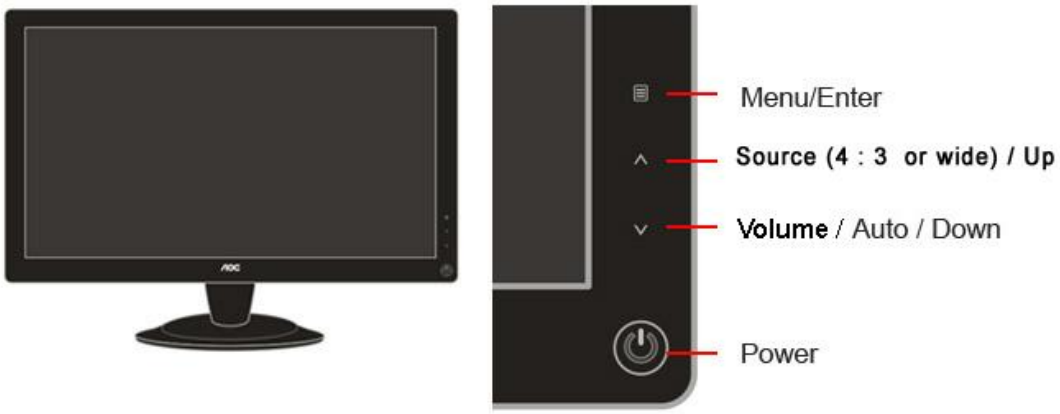

Power

Press to turn on or turn off the monitor.

Source (4 : 3 or wide)/ Up

Press ^key to change the screen aspect ratio between standard 4:3 format or Wide format. When the input resolution is wide format, the aspect ratio hotkey is disabled. When the main menu or sub-menu is active, the ^ key functions as to select up or increase value.

Source hot key : When the OSD is closed, press button will be Source hot key function (Only for the models with dual or more inputs) .Press Source button continuously to select the input source showed in the message bar , press Menu/Enter button to change to the source selected.

Menu / Enter

Press to activate OSD, then press Up or Down to navigate through the functions. Once the desired function is highlighted, press the Menu button to activate the submenu. In sub-menu, Press Up or Down to navigate through the functions. Once the desired function is highlighted, press Up or Down button to change the setting. Select Exit icon then press Menu button to return to superior menu.

Volume(Auto) / Down

When there is no OSD, press the key to **activate** Volume and auto function, then press Up or Down to select Volume or Auto configure function. Once the Volume icon is selected, press Menu button to activate it, and press Up or Down to change the setting, press Menu button for confirmation and exit OSD . Once the Auto icon is selected, press Menu button to do auto configure and exit OSD . If the product has no speaker built-in, to press the Down key is to do auto configure directly. When it is DVI or HDMI input, auto configure function is disabled and the auto icon is gray.

Downloaded from ManualMonitor.com Manuals

OSD Setting

Basic and simple instruction on the control keys.

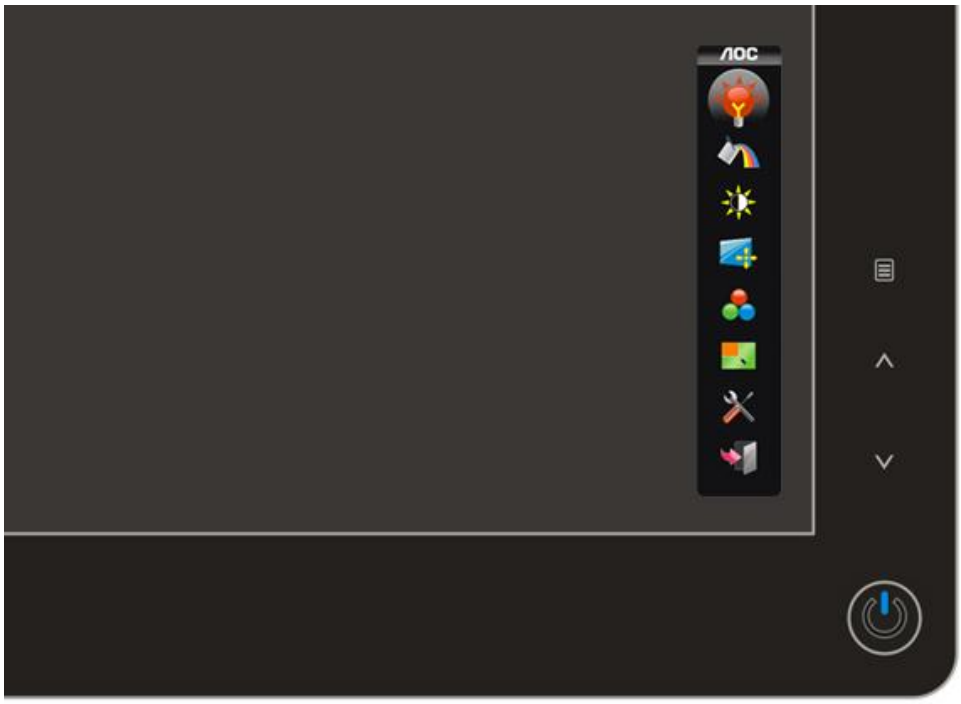

When you press the MENU button on the front control of your monitor, the On DOWN Screen Display (OSD) Main Controls window will pop up and you can then start making adjustments to your monitor's various features. Use the **UP** or **DOWN** keys to make your adjustments. Follow the steps below to activate the adjustment.

1) Press the **MENU** key to activate the OSD window.

2) Press **UP** or **DOWN** to navigate through the functions. Once the desired function is highlighted, press the MENU key to activate it. If the function selected has a sub-menu, press **UP** or **DOWN** again to navigate through the sub-menu functions. Once the desired function is highlighted, press **MENU** key to activate it.

3) Press **UP** or **DOWN** to change the settings of the selected function. Press **MENU** key to exit and save, select the exit function. If you want to adjust any other function, repeat steps 2-3.

4) OSD Lock Function: To lock the OSD, press and hold the **MENU** key while the monitor is off and then press power button to turn the monitor on. To unlock the OSD, press and hold the **MENU** key while the monitor is off and then press power button to turn the monitor on.

Downloaded from ManualMonitor.com Manuals

Eco mode

1

Touch (Menu) to call out MENU.

2 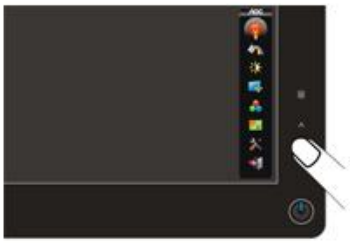

Touch ∧ ∨ to select (Eco Mode).

3 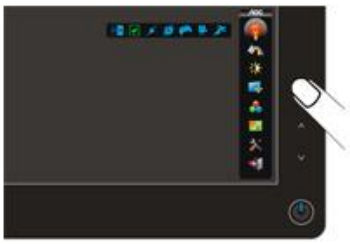

Touch to enter Eco Mode submenu.

4

Touch ∧ ∨ to select desired mode:

5 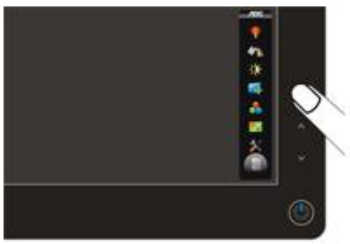

Touch twice to exit.

Downloaded from ManualMonitor.com Manuals

	Item	Icon	Function	Adjust Range	Description
	Eco mode		DCR	Select to active	Dynamic contrast ratio
			Standard	Select to active	Standard Mode
			Text	Select to active	Text Mode
			Internet	Select to active	Internet Mode
			Game	Select to active	Game Mode
			Movie	Select to active	Movie Mode
			Sports	Select to active	Sports Mode

Notes :

When Eco mode is not set as “Standard”, Contrast and Brightness can not be adjusted; When DCR is set as “On”, Contrast, Brightness, Eco mode and Gamma can not be adjusted.

Downloaded from ManualMonitor.com Manuals

Color Boost

1 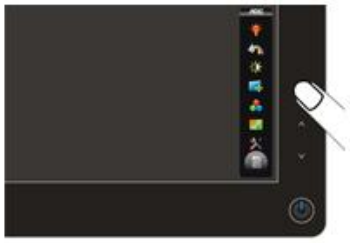

Touch (Menu) to call out MENU.

2 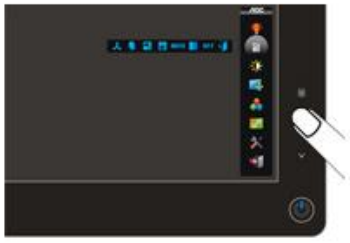

Touch ∧ ∨ to select (Color Boost).

3 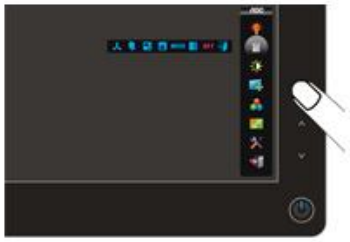

Touch to enter Color Boost submenu.

4

Touch ∧ ∨ to select desired mode:

AUTO OFF

5

Touch twice to exit.

Downloaded from ManualMonitor.com Manuals

	Item	Icon	Function	Adjust Range	Description
	Color Boost		Full Enhance	on or off	Disable or Enable Full Enhance Mode
			Nature Skin	on or off	Disable or Enable Nature Skin Mode
			Sky-blue	on or off	Disable or Enable Sky-blue Mode
			Green Field	on or off	Disable or Enable Green Field Mode
		AUTO	Auto Detect	on or off	Disable or Enable AutoDetect Mode
			Demo	on or off	Disable or Enable Demo
		OFF	Off		Disable Color Boost
			Exit		Exit to main menu

Notes :

Full Enhance: Total color saturation is enhanced, suitable for vivid pictures.
Natural Skin: Suitable for human portrait.
Green Field: Suitable for large area of green.
Sky Blue: Suitable for sky or ocean scene.
Auto Detect: Suitable for outdoor or garden.
Demo: Screen divided into two for comparison purpose.

Downloaded from ManualMonitor.com Manuals

Luminance

1 Touch (Menu) to call out MENU.

2 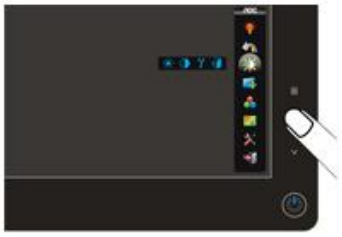 Touch ∧ ∨ to select (Luminance).

3 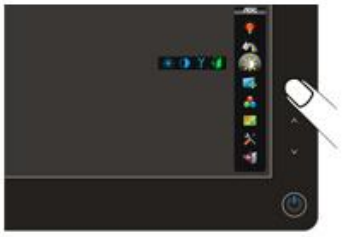 Touch to enter Luminance submenu.

4 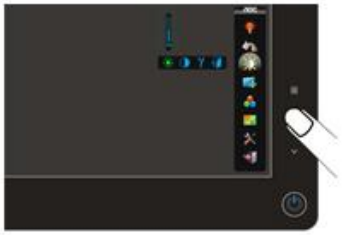 Touch ∧ ∨ to select submenu:

5 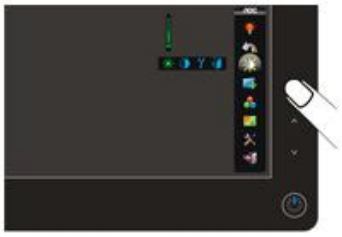 Touch to enter , then touch ∧ ∨ to adjust .

6 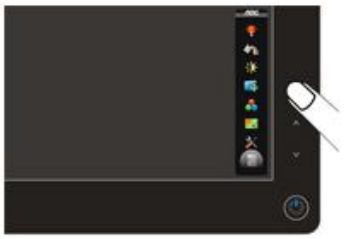 Touch twice to exit.

Downloaded from ManualMonitor.com Manuals

	Item	Icon	Function	Adjust Range	Description
	Luminance		Brightness	00-100	
			Contrast	00-100	
			Gamma	Gamma1, 2, 3	Adjust to Gamma1, Gamma2, Gamma3
			Exit		Exit to main menu

Notes :

When Eco mode is not set as “Standard”, Contrast and Brightness can not be adjusted; When DCR is set as “On”, Contrast, Brightness, Eco mode and Gamma can not be adjusted.

Downloaded from ManualMonitor.com Manuals

Image Setup

1

Touch (Menu) to call out MENU.

2

Touch ∧ ∨ to select (Image Setup).

3

Touch to enter Image Setup submenu.

4

Touch ∧ ∨ to select submenu:

5

Touch to enter , then touch ∧ ∨ to adjust .

6 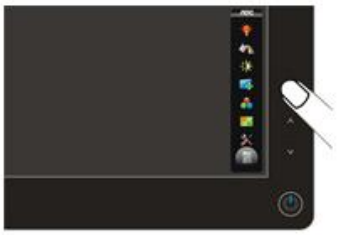

Touch twice to exit.

Downloaded from ManualMonitor.com Manuals

	Item	Icon	Function	Adjust Range	Description
	Image Setup		Clock	00-100	Adjust picture Clock to reduce Vertical-Line noise.
			Phase	00-100	Adjust Picture Phase to reduce Horizontal-Line noise
			H.Position	00-100	Adjust the vertical position of the picture.
			V.Position	00-100	Adjust the horizontal position of the picture.
			Exit		Exit to main menu

Notes :

When the input source is digital signal like DVI or HDMI, Image Setup can not be adjusted.

Downloaded from ManualMonitor.com Manuals

Color Temperature

1

Touch (Menu) to call out MENU.

2

Touch ∧ ∨ to select (Color Temperature).

3

Touch to enter Color Temperature submenu.

4

Touch ∧ ∨ to select submenu:

R G B sRGB

5

Touch to enter , then touch ∧ ∨ to adjust .

6

Touch twice to exit.

Downloaded from ManualMonitor.com Manuals

	Item	Icon	Function	Adjust Range	Description
	Color Temperature	R	User Red	00-100	Red Gain from Digital-register
		G	User Green	00-100	Green Gain Digital-register.
		B	User Blue	00-100	Blue Gain from Digital-register
			Normal	7300K	Recall Normal Color Temperature from EEPROM.
			Warm	6500K	Recall Warm Color Temperature from EEPROM.
			Cool	9300K	Recall Cool Color Temperature from EEPROM.
		sRGB	sRGB		Recall SRGB Color Temperature from EEPROM.
			Exit		Exit to main menu

Downloaded from ManualMonitor.com Manuals

Picture Boost

1

Touch (Menu) to call out MENU.

2

Touch ∧ ∨ to select (Picture Boost).

3

Touch to enter Picture Boost submenu.

Then touch ∧ ∨ , select to activate Picture Boost.

4

Touch ∧ ∨ to select submenu:

5

Touch to enter , then touch ∧ ∨ to adjust .

6

Touch twice to exit.

Downloaded from ManualMonitor.com Manuals

	Item	Icon	Function	Adjust Range	Description
	Picture Boost		Horizontal Position	00-100	Adjust Frame horizontal Position
			Vertical Position	00-100	Adjust Frame vertical Position
			Contrast	00-100	Adjust Frame Contrast
			Brightness	00-100	Adjust Frame Brightness
			Frame Size	14-100	Adjust Frame Size
			Bright Frame	on or off	Disable or Enable Bright Frame
			Exit		Exit to main menu

Notes :

One of DCR, Color Boost, and Picture Boost functions is active, the other two function is turned off accordingly.

Downloaded from ManualMonitor.com Manuals

Extra Setting

1 Touch (Menu) to call out MENU.

2 Touch ∧ ∨ to select (Extra Setting).

3 Touch to enter Extra Setting submenu.

4 Touch ∧ ∨ to select submenu:

DDC/CI

5 Touch to enter , then touch ∧ ∨ to adjust .

6 Touch twice to exit.

Downloaded from ManualMonitor.com Manuals

	Item	Icon	Function	Adjust Range	Description
	Extra Setting		Language		Select the OSD language
			Reset	yes or no	Reset the menu to default
		DDC/CI	DDC-CI	yes or no	Turn ON/OFF DDC-CI Support
			Timeout	05-120	Adjust the OSD Timeout
			Transparence	00-100	Adjust the transparence of OSD
			H. Position	00-100	Adjust the vertical position of OSD
			V. Position	00-100	Adjust the horizontal position of OSD
			Off Timer	00-24	Adjust the DC off time
			Exit		Exit to main menu

Downloaded from ManualMonitor.com Manuals

Exit

1

Touch (Menu) to call out MENU.

2

Touch twice to exit.

Downloaded from ManualMonitor.com Manuals

LED Indicator

Status	LED Color	
Full Power Mode	Blue	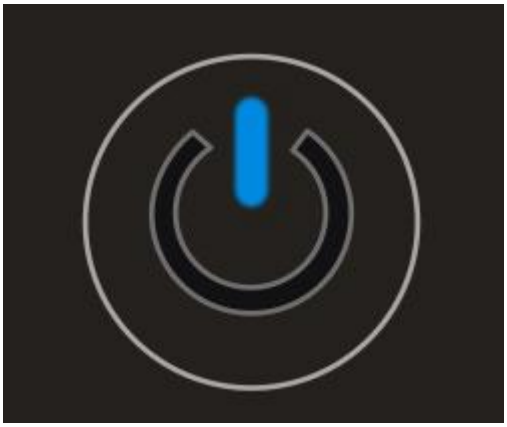
Active-off Mode	Orange	

Downloaded from ManualMonitor.com Manuals

Driver

Monitor Driver

Windows 2000

1. Start Windows® 2000
2. Click on the 'Start' button, point to 'Settings', and then click on 'Control Panel'.
3. Double click on the 'Display' Icon.
4. Select the 'Settings' tab then click on 'Advanced...'.
5. Select 'Monitor'

- If the 'Properties' button is inactive, it means your monitor is properly configured. Please stop installation.
- If the 'Properties' button is active. Click on 'Properties' button. Please follow the steps given below.

6. Click on 'Driver' and then click on 'Update Driver...' then click on the 'Next' button.
7. Select 'Display a list of the known drivers for this device so that I can choose a specific driver', then click on 'Next' and then click on 'Have disk...'.
8. Click on the 'Browse...' button then select the appropriate drive F: (CD-ROM Drive).
9. Click on the 'Open' button, then click on the 'OK' button.
10. Select your monitor model and click on the 'Next' button.
11. Click on the 'Finish' button then the 'Close' button.

If you can see the 'Digital Signature Not Found' window, click on the 'Yes' button.

Windows ME

1. Start Windows® Me
2. Click on the 'Start' button, point to 'Settings', and then click on 'Control Panel'.
3. Double click on the 'Display' Icon.
4. Select the 'Settings' tab then click on 'Advanced...'.
5. Select the 'Monitor' button, then click on 'Change...' button.
6. Select 'Specify the location of the driver(Advanced)' and click on the 'Next' button.
7. Select 'Display a list of all the drivers in a specific location, so you can choose the driver you want', then click on 'Next' and then click on 'Have Disk...'.
8. Click on the 'Browse...' button, select the appropriate drive F: (CD-ROM Drive) then click on the 'OK' button.
9. Click on the 'OK' button, select your monitor model and click on the 'Next' button.
10. Click on 'Finish' button then the 'Close' button.

Downloaded from ManualMonitor.com Manuals

Windows XP

1. Start Windows® XP
2. Click on the 'Start' button and then click on 'Control Panel'.

3. Select and click on the category ‘Appearance and Themes’

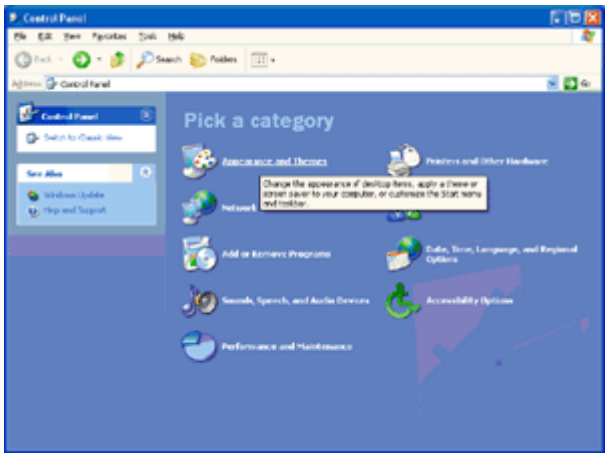

4. Click on the 'Display' Item.

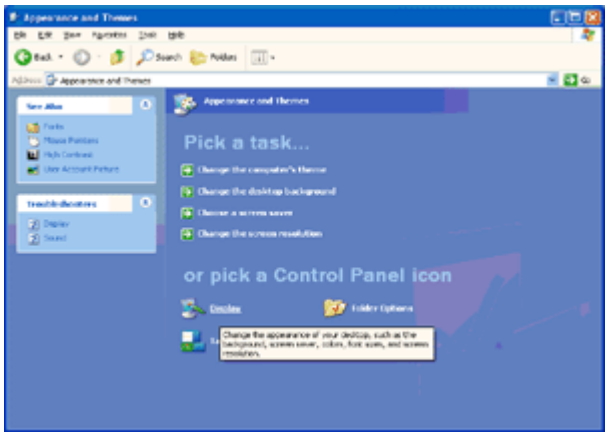

Downloaded from ManualMonitor.com Manuals

5. Select the 'Settings' tab then click on the 'Advanced' button.

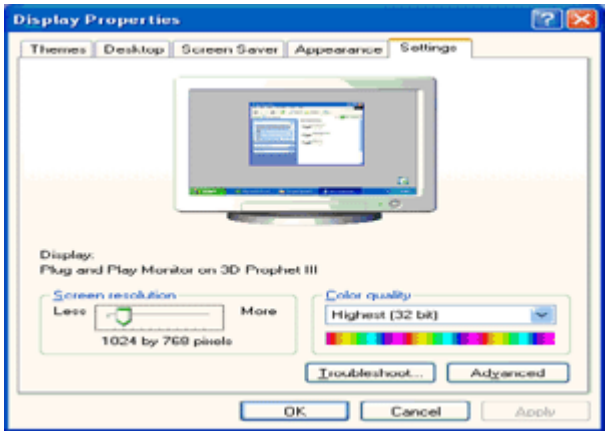

6. Select 'Monitor' tab

- If the 'Properties' button is inactive, it means your monitor is properly configured. Please stop installation.
- If the 'Properties' button is active, click on 'Properties' button.

Please follow the steps below.

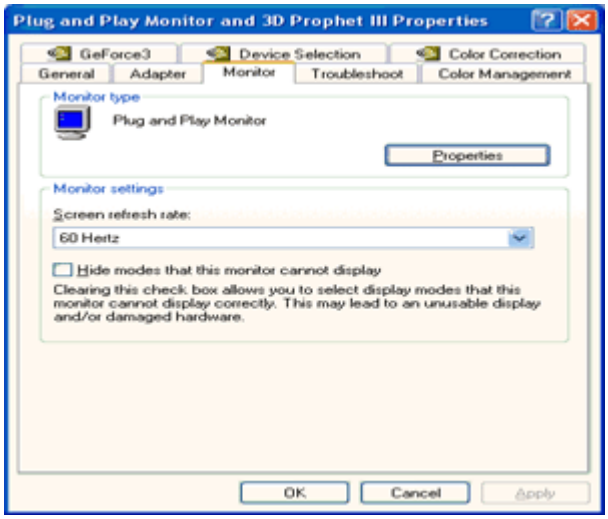

7. Click on the 'Driver' tab and then click on 'Update Driver...' button.

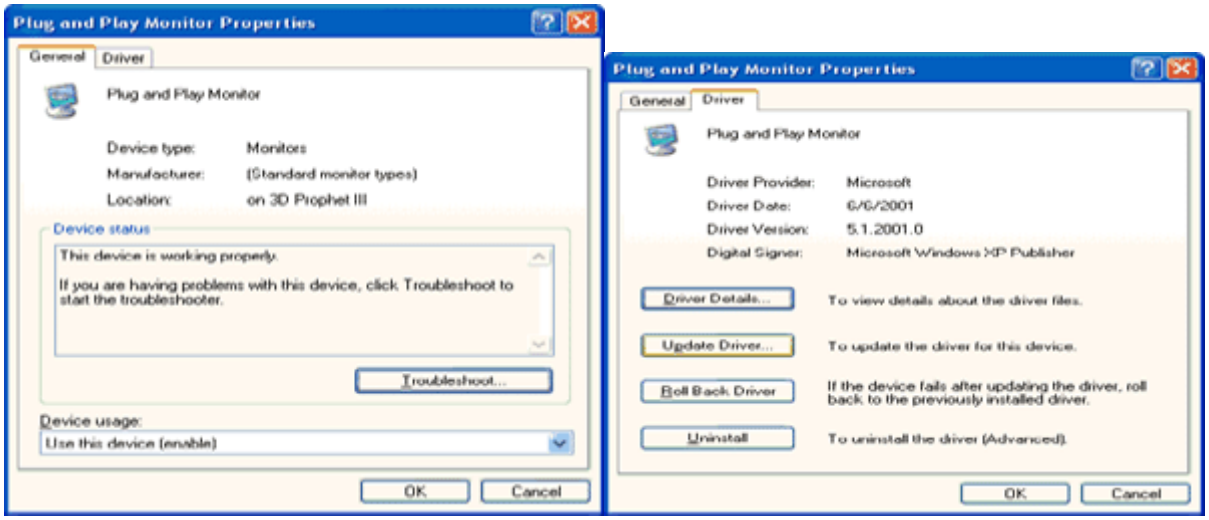

Downloaded from ManualMonitor.com Manuals

8. Select the 'Install from a list or specific location [advanced]' radio button and then click on the 'Next' button.

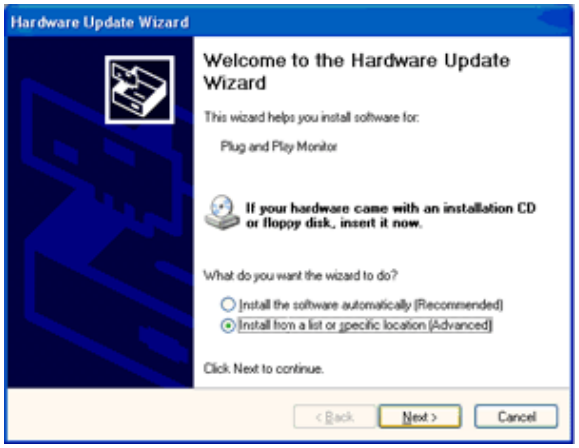
Hardware Update Wizard
Welcome to the Hardware Update Wizard
This wizard helps you install software for:
Plug and Play Monitor
If your hardware came with an installation CD or floppy disk, insert it now.
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
< Back
Next >
Cancel

9. Select the 'Don't Search. I will choose the driver to install' radio button. Then click on the 'Next' button.

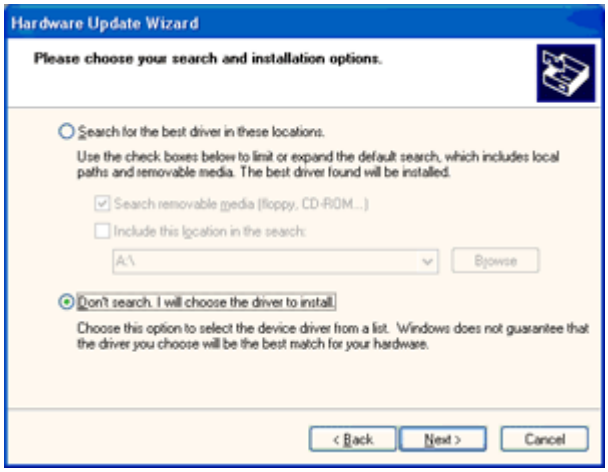
Hardware Update Wizard
Please choose your search and installation options.
Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM...)
Include this location in the search:
A:\
Browse
Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< Back
Next >
Cancel

10. Click on the 'Have disk...' button, then click on the 'Browse...' button and then select the appropriate drive F: (CD-ROM Drive).

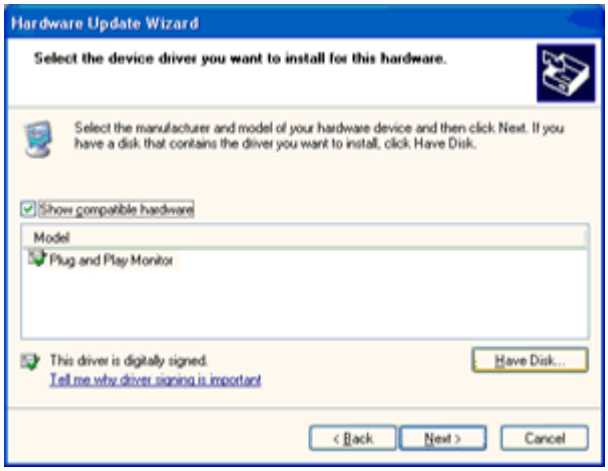
Hardware Update Wizard
Select the device driver you want to install for this hardware.
Select the manufacturer and model of your hardware device and then click Next. If you have a disk that contains the driver you want to install, click Have Disk.
Show compatible hardware
Model
Plug and Play Monitor
This driver is digitally signed.
Tell me why driver signing is important
Have Disk...
< Back
Next >
Cancel

11. Click on the 'Open' button, then click the 'OK' button.

12. Select your monitor model and click on the 'Next' button.

- If you can see the 'has not passed Windows® Logo testing to verify its compatibility with Windows® XP' message, please click on the 'Continue Anyway' button.

13. Click on the 'Finish' button then the 'Close' button.

14. Click on the 'OK' button and then the 'OK' button again to close the Display Properties dialog box.

Downloaded from ManualMonitor.com Manuals

Windows Vista

1. Click "Start " and "Control Panel". Then, double-click on "Appearance and Personalization".

2. Click "Personalization" and then "Display Settings".

3. Click "Advanced Settings...".

Downloaded from ManualMonitor.com Manuals

4. Click "Properties" in the "Monitor" tab. If the "Properties" button is deactivated, it means the configuration for your monitor is completed. The monitor can be used as is.

If the message "Windows needs..." is displayed, as shown in the figure below, click "Continue".

Generic PnP Monitor and NVIDIA GeForce 6600 LE (Microsoft Co...
Adapter
Monitor
Troubleshoot
Color Management
Monitor Type
Generic PnP Monitor
Properties
Monitor Settings
Screen refresh rate:
60 Hertz
Hide modes that this monitor cannot display
Clearing this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display and/or damaged hardware.
OK
Cancel
Apply

5. Click "Update Driver..." in the "Driver" tab.

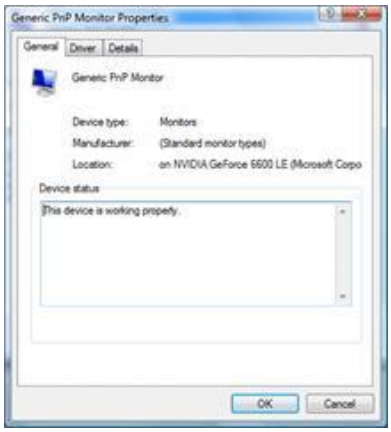

6. Check the "Browse my computer for driver software" checkbox and click "Let me pick from a list of device drivers on my computer".

Update Driver Software - Generic PnP Monitor
Browse for driver software on your computer
Search for driver software in this location:
Browse...
Include subfolders
Let me pick from a list of device drivers on my computer
This list will show installed driver software compatible with the device, and all driver software in the same category as the device.
Next
Cancel

7. Click on the 'Have disk...' button, then click on the 'Browse...' button and then select the appropriate drive F:\Driver (CD-ROM Drive).

8. Select your monitor model and click on the 'Next' button.

9. Click "Close" → "Close" → "OK" → "OK" on the following screens displayed in sequence.

Downloaded from ManualMonitor.com Manuals

Windows 7

1.Start Windows® 7

2.Click on the **'Start'** button and then click on **'Control Panel'.**

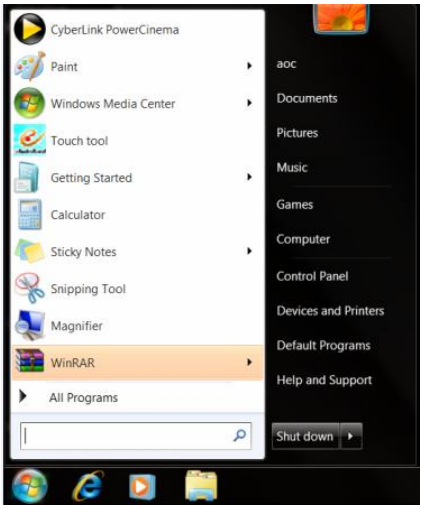

3. Click on the **'Display'** icon.

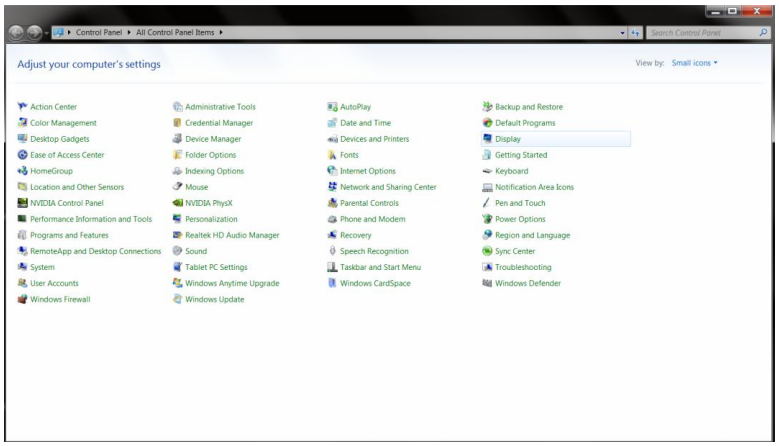

4.Ckick on the **“Change display settings”** button.

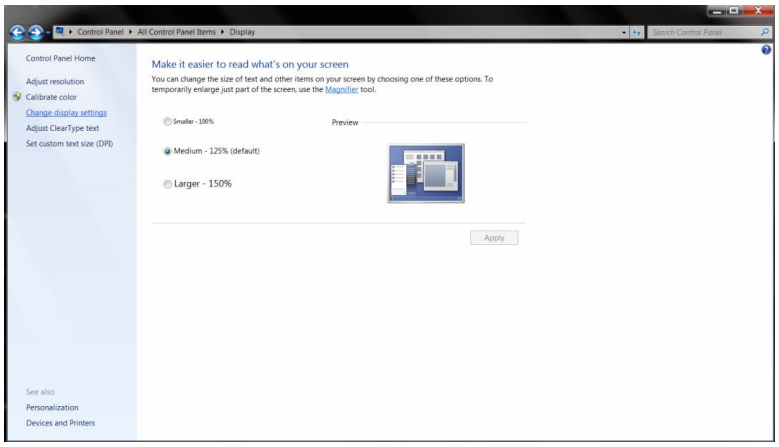
Control Panel ▸ All Control Panel Items ▸ Display
Control Panel Home
Adjust resolution
Calibrate color
Change display settings
Adjust ClearType text
Set custom text size (DPI)
Make it easier to read what's on your screen
You can change the size of text and other items on your screen by choosing one of these options. To temporarily enlarge just part of the screen, use the Magnifier tool.
Smaller - 100%
Medium - 125% (default)
Larger - 150%
Preview
Apply
See also
Personalization
Devices and Printers

Downloaded from ManualMonitor.com Manuals

5.Click the “**Advanced Settings”** button.

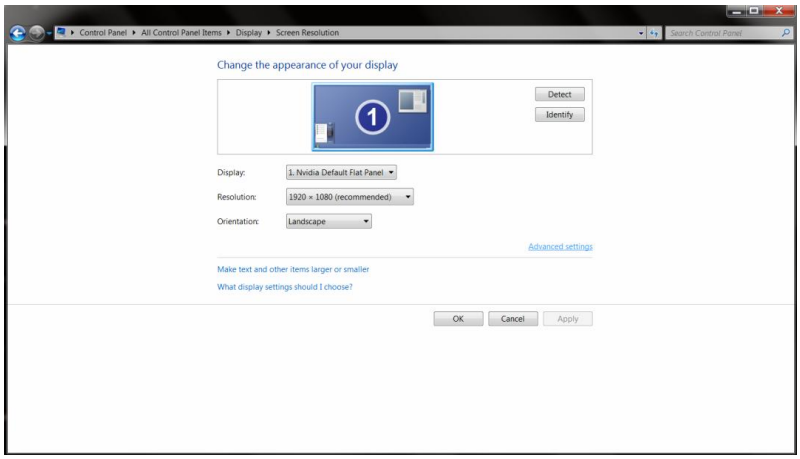

6.Click the **“Monitor”** tab and then click the **“Properties”** button.

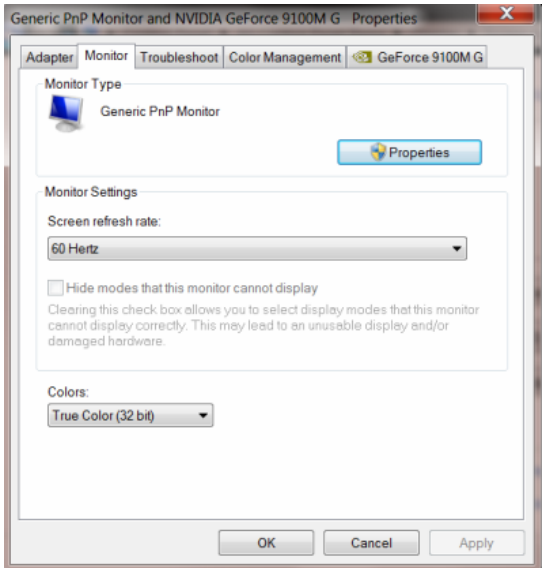

7.Click the **“Driver”** tab.

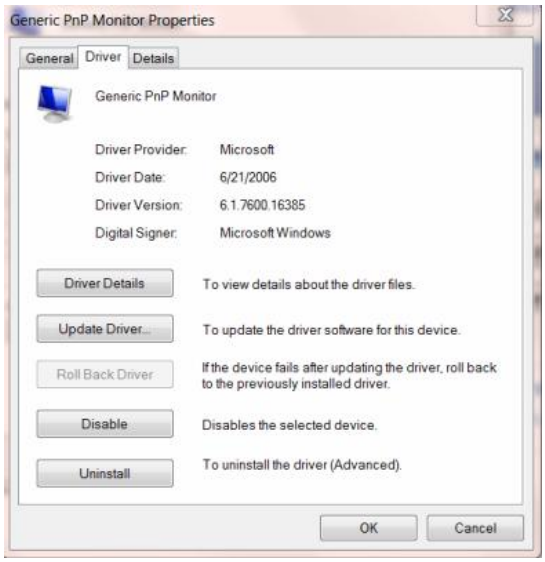

Downloaded from ManualMonitor.com Manuals

8. Open the "Update Driver Software-Generic PnP Monitor" window by clicking on **“Update Driver... “**and then click the **"Browse my computer for driver software"** button.

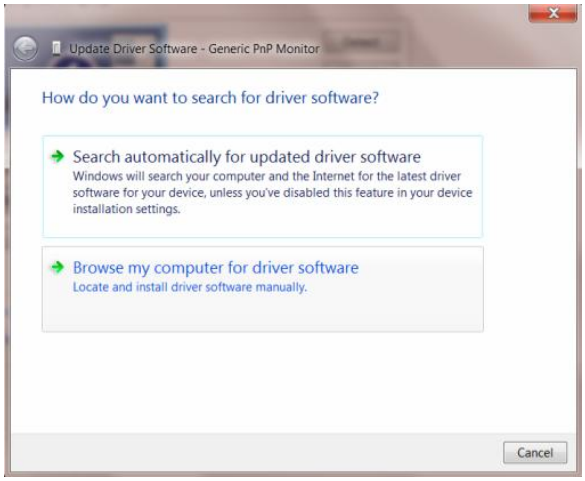
Update Driver Software - Generic PnP Monitor
How do you want to search for driver software?
Search automatically for updated driver software
Windows will search your computer and the Internet for the latest driver software for your device, unless you've disabled this feature in your device installation settings.
Browse my computer for driver software
Locate and install driver software manually.
Cancel

9. Select **"Let me pick from a list of device drivers on my computer"**.

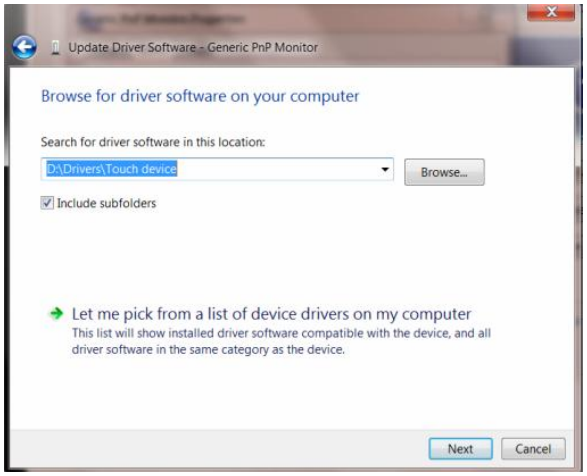
Update Driver Software - Generic PnP Monitor
Browse for driver software on your computer
Search for driver software in this location:
D:\Drivers\Touch device
Browse...
Include subfolders
Let me pick from a list of device drivers on my computer
This list will show installed driver software compatible with the device, and all driver software in the same category as the device.
Next
Cancel

10. Click the **“Have Disk”** button. Click on the **“Browse”** button and navigate to the following directory: X:\Driver\module name (where X is the drive letter designator for the CD-ROM drive).

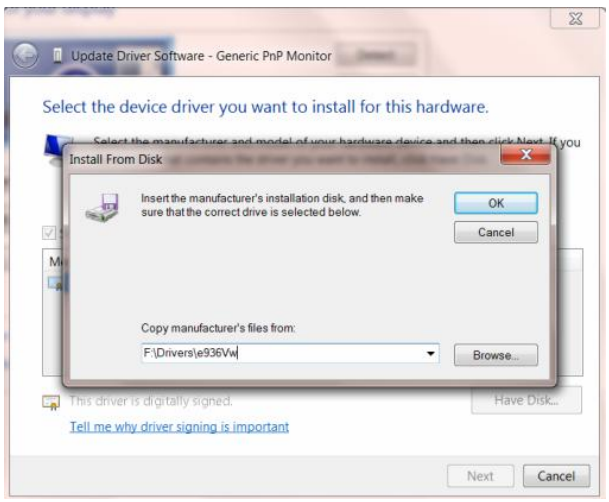
Update Driver Software - Generic PnP Monitor
Select the device driver you want to install for this hardware.
Install From Disk
Insert the manufacturer's installation disk, and then make sure that the correct drive is selected below.
OK
Cancel
Copy manufacturer's files from:
F:\Drivers\e936Vw
Browse...
This driver is digitally signed.
Have Disk...
Tell me why driver signing is important
Next
Cancel

Downloaded from ManualMonitor.com Manuals

11. Select the **"xxx.inf"** file and click the **“Open”** button. Click the **“OK”** button.

12. Select your monitor model and click the **“Next”** button. The files will be copied from the CD to your hard disk drive.

13. Close all open windows and remove the CD.

14. Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

Downloaded from ManualMonitor.com Manuals

i-Menu

Welcome to “i-Menu” software by AOC. i-Menu makes it easy to adjust your monitor display setting by using on screen menus instead of the OSD button on the monitor. To complete installation, please follow the installation guide.

Downloaded from ManualMonitor.com Manuals

Troubleshoot

Problem & Question	Possible Solutions
Power LED Is Not ON	Make sure the power button is ON and the Power Cord is properly connected to a grounded power outlet and to the monitor.
No images on the screen	• Is the power cord connected properly? Check the power cord connection and power supply. • Is the cable connected correctly? (Connected using the D-sub cable) Check the DB-15 cable connection. (Connected using the DVI cable) Check the DVI cable connection. * DVI input is not available on every model. • If the power is on, reboot the computer to see the initial screen (the login screen), which can be seen. If the initial screen (the login screen) appears, boot the computer in the applicable mode (the safe mode for Windows ME/XP/2000) and then change the frequency of the video card. (Refer to the Setting the Optimal Resolution) If the initial screen (the login screen) does not appear, contact the Service Center or your dealer. • Can you see "Input Not Supported" on the screen? You can see this message when the signal from the video card exceeds the maximum resolution and frequency that the monitor can handle properly. Adjust the maximum resolution and frequency that the monitor can handle properly. • Make sure the AOC Monitor Drivers are installed.
Picture Is Fuzzy & Has Ghosting Shadowing Problem	Adjust the Contrast and Brightness Controls. Press to auto adjust. Make sure you are not using an extension cable or switch box. We recommend plugging the monitor directly to the video card output connector on the back .
Picture Bounces, Flickers Or Wave Pattern Appears In The Picture	Move electrical devices that may cause electrical interference as far away from the monitor as possible. Use the maximum refresh rate your monitor is capable of at the resolution your are using.

Downloaded from ManualMonitor.com Manuals

Monitor Is Stuck In Active Off-Mode"	The Computer Power Switch should be in the ON position. The Computer Video Card should be snugly fitted in its slot. Make sure the monitor's video cable is properly connected to the computer. Inspect the monitor's video cable and make sure no pin is bent. Make sure your computer is operational by hitting the CAPS LOCK key on the keyboard while observing the CAPS LOCK LED. The LED should either turn ON or OFF after hitting the CAPS LOCK key.
Missing one of the primary colors (RED, GREEN, or BLUE)	Inspect the monitor's video cable and make sure that no pin is damaged. Make sure the monitor's video cable is properly connected to the computer.
Screen image is not centered or sized properly	Adjust H-Position and V-Position or press hot-key (AUTO).
Picture has color defects (white does not look white)	Adjust RGB color or select desired color temperature.
Horizontal or vertical disturbances on the screen	Use Windows 95/98/2000/ME/XP shut-down mode Adjust CLOCK and FOCUS. Press to auto-adjust.

Downloaded from ManualMonitor.com Manuals

Specification

General Specification

LCD Panel	model name	e2236Vwa	
	Driving system	TFT Color LCD	
	Viewable Image Size	54.7cm diagonal	
	Pixel pitch	0.248mm(H) x 0.248mm(V)	
	Video	R, G, B Analog Interface & Digital Interface	
	Separate Sync.	H/V TTL	
	Display Color	16.7M Colors	
	Dot Clock	148.5 MHz	
Resolution	Horizontal scan range	30 kHz - 80 kHz	
	Horizontal scan Size(Maximum)	476.64mm	
	Vertical scan range	55 Hz - 75 Hz	
	Vertical scan Size(Maximum)	268.11mm	
	Optimal preset resolution	1920 x 1080 (60 Hz)	
	Highest preset resolution	1920 x 1080 (60 Hz)	
	Plug & Play	VESA DDC2B/CI	
	Input Connector	D-Sub 15pin & DVI-D	
	Input Video Signal	Analog: 0.7Vp-p(standard), 75 OHM, TMDS	
	Power Source	100-240V~，50/60Hz	
	Power Consumption	Typical < 42 W	
		Standby < 1 W	
	USB Downstream port (A type)	To USB device, loading < 100mA	
	off timer	0~24hours	Select timing to turn off the monitor.
	Speakers	2W x 2	
Physical Characteristics	Connector Type	15-pin Mini D-Sub& DVI-D	
	Signal Cable Type	Detachable	
	Dimensions & Weight:	Height (with base)	396.6 mm
		Width	531.3mm

Downloaded from ManualMonitor.com Manuals

		Depth	206mm
		Weight (monitor only)	4.35 kg
		Weight (with packaging)	5.8 kg
Environmental	Temperature:	Operating	0° to 40°
		Non-Operating	-20°to 60°
	Humidity:	Operating	10% to 85% (non-condensing)
		Non-Operating	5% to 80% (non-condensing)
	Altitude:	Operating	0~ 3000m (0~ 10000 ft)
		Non-Operating	0~ 5000m (0~ 15000 ft)

Preset Display Modes

STAND	RESOLUTION	HORIZONTAL FREQUENCY(kHZ)	VERTICAL FREQUENCY(Hz)
VGA	640×480 @60Hz	31.469	59.940
VGA	640×480 @67Hz	35.000	66.667
VGA	640×480 @72Hz	37.861	72.809
VGA	640×480 @75Hz	37.500	75.000
Dos-mode	720×400 @70Hz	31.469	70.087
SVGA	800×600 @56Hz	35.156	56.250
SVGA	800×600 @60Hz	37.879	60.317
SVGA	800×600 @72Hz	48.077	72.188
SVGA	800×600 @75Hz	46.875	75.000
SVGA	832×624 @75Hz	49.725	74.550
XGA	1024×768 @60Hz	48.363	60.004
XGA	1024×768 @70Hz	56.476	70.069
XGA	1024×768 @75Hz	60.023	75.029
XGA	1024×768 @75Hz	60.241	74.927
***	1280×960 @60Hz	60.000	60.000
SXGA	1280×1024 @60Hz	63.981	60.02
SXGA	1280×1024 @75Hz	79.976	75.025
WXGA+	1440×900 @60Hz	55.935	59.887
WSXGA	1680X1050 @60Hz	65.290	59.954
HD	1920×1080@60Hz	67.500	60.000

Downloaded from ManualMonitor.com Manuals

Pin Assignments

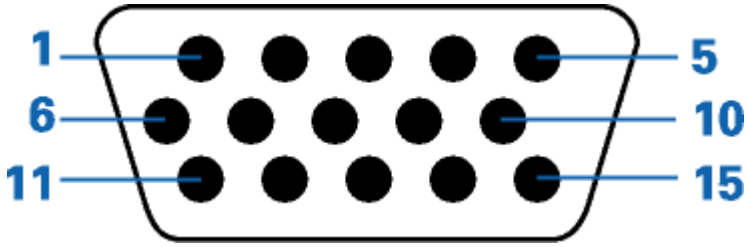

Pin Number	15-Pin Side of the Signal Cable
1	Video-Red
2	Video-Green
3	Video-Blue
4	N.C.
5	Detect Cable
6	GND-R
7	GND-G
8	GND-B
9	+5V
10	Ground
11	N.C.
12	DDC-Serial data
13	H-sync
14	V-sync
15	DDC-Serial clock

Downloaded from ManualMonitor.com Manuals

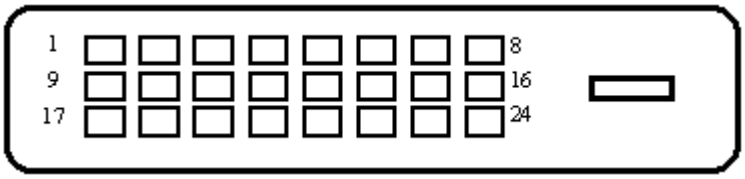

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
1	TMDS Data 2-	9	TMDS Data 1-	17	TMDS Data 0-
2	TMDS Data 2+	10	TMDS Data 1+	18	TMDS Data 0+
3	TMDS Data 2/4 Shield	11	TMDS Data 1/3 Shield	19	TMDS Data 0/5 Shield
4	TMDS Data 4-	12	TMDS Data 3-	20	TMDS Data 5-
5	TMDS Data 4+	13	TMDS Data 3+	21	TMDS Data 5+
6	DDC Clock	14	+5V Power	22	TMDS Clock Shield
7	DDC Data	15	Ground(for+5V)	23	TMDS Clock +
8	N.C.	16	Hot Plug Detect	24	TMDS Clock -

Downloaded from ManualMonitor.com Manuals

Plug and Play

Plug & Play DDC2B Feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities.

The DDC2B is a bi-directional data channel based on the I2C protocol. The host can request EDID information over the DDC2B channel.

Downloaded from ManualMonitor.com Manuals

Regulation

FCC Notice

FCC Class B Radio Frequency Interference Statement WARNING: (FOR FCC CERTIFIED MODELS)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

NOTICE :

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.
The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference. It is the responsibility of the user to correct such interference.

Downloaded from ManualMonitor.com Manuals

WEEE Declaration

Disposal of Waste Equipment by Users in Private Household in the European Union.

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste.Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment.The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product .

EPA Energy Star

ENERGY STAR® is a U.S. registered mark. As an ENERGY STAR® Partner, AOC International (Europe) GmbH and Envision Peripherals, Inc. have determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

Downloaded from ManualMonitor.com Manuals

EPEAT Declaration

EPEAT is a system to help purchasers in the public and private sectors evaluate, compare and select desktop computers, notebooks and monitors based on their environmental attributes. EPEAT also provides a clear and consistent set of performance criteria for the design of products, and provides an opportunity for manufacturers to secure market recognition for efforts to reduce the environmental impact of its products.

AOC believes in protecting the environment.
With a key concern for the conservation of natural resources, as well as landfill protection, AOC announces the launch of AOC monitor's packaging recycling program. This program is designed to help you discard of your monitor carton and filler materials properly. If a local recycling center is not available, AOC will recycle the packaging material for you, including foam filler and carton. AOC Display solution will only recycle AOC monitor packaging. Please refer to the following website address:

Only for North and South American, excluding Brazil:
http://us.aoc.com/about/environmental_impact

For Germany:
http://www.aoc-europe.com/en/service/tco.php

For Brazil:
http://www.aoc.com.br/2007/php/index.php?req=pagina&pgn_id=134

Downloaded from ManualMonitor.com Manuals

Service

Warranty Statement for Europe

LIMITED THREE-YEAR WARRANTY*
AOC Color Monitors sold within Europe
AOC International (Europe) GmbH warrants this product to be free from defects in material and workmanship for a period of Three (3) years after the original date of consumer purchase. During this period, AOC International (Europe) GmbH will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as *stated below. The defective products that are replaced become the property of AOC International (Europe) GmbH.

If the product appears to be defective, please contact your local dealer or refer to the warranty card when attached to the product.

Deliver the product freight pre-paid, along with the dated proof of purchase, to the AOC Authorized Service Center. If you cannot deliver the product in person:

- Pack it in its original shipping container (or equivalent)
- Put the RMA number on the address label
- Put the RMA number on the shipping carton
- Insure it (or assume the risk of loss/damage during shipment)
- Pay all shipping charges

AOC International (Europe) GmbH is responsible neither for any damage or loss during inbound transport damage nor to inbound product that was not properly packaged.

AOC International (Europe) GmbH will pay the return shipping charges within one of the countries specified within this warranty statement. AOC International (Europe) GmbH is not responsible for any costs associated with the transportation of product across international borders. This includes the international border within the European Union.

* This limited warranty does not cover any losses or damages that occur as a result of

- Shipping or improper installation or maintenance
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an AOC Authorized Service Center
- Improper environment
- Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

This limited warranty does not cover any of the product firmware or hardware that you or any third party have

Downloaded from ManualMonitor.com Manuals

modified or altered; you bear the sole responsibility and liability for any such modification or alteration.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD.

AOC INTERNATIONAL (EUROPE) GMBH OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCLUSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) GMBH LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) GMBH BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

Information in this document is subject to change without notice.
For more details, please visit: **http://www.aoc-europe.com/en/service/index.php**

Downloaded from ManualMonitor.com Manuals

Warranty Statement for North & South America (excluding Brazil)

WARRANTY STATEMENT
for AOC Color Monitors
Including those Sold within North America as Specified

Envision Peripherals, Inc. warrants this product to be free from defects in material and workmanship for a period of three (3) years for parts & labor and one (1) year for CRT Tube or LCD Panel after the original date of consumer purchase. During this period, EPI (EPI is the abbreviation of Envision Peripherals, Inc.) will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as *stated below. The parts or product that are replaced become the property of EPI.

In the USA to obtain service under this limited warranty, call EPI for the name of the Authorized Service Center closest to your area. Deliver the product freight pre-paid, along with the dated proof of purchase, to the EPI Authorized Service Center. If you cannot deliver the product in person:

- Pack it in its original shipping container (or equivalent)
- Put the RMA number on the address label
- Put the RMA number on the shipping carton
- Insure it (or assume the risk of loss/damage during shipment)
- Pay all shipping charges

EPI is not responsible for damage to inbound product that was not properly packaged.
EPI will pay the return shipment charges within one of the countries specified within this warranty statement. EPI is not responsible for any costs associated with the transportation of product across international borders. This includes the international borders of the countries within this warranty statements.

In the United States and Canada contact your Dealer or EPI Customer Service, RMA Department at the toll free number (888) 662-9888. Or you can request an RMA Number online at www.aoc.com/na-warranty.

* This limited warranty does not cover any losses or damages that occur as a result of:

- Shipping or improper installation or maintenance
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an EPI Authorized Service Center
- Improper environment
- Excessive or inadequate heating or air conditioning or electrical power failures, surges, or other irregularities

This three-year limited warranty does not cover any of the product's firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modification or alteration.

Downloaded from ManualMonitor.com Manuals

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR AND ONE (1) YEAR FOR CRT TUBE OR LCD PANEL FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

EPI OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCLUSIVELY AS STATED HERE. EPI' LIABILITY, WHETHER BASED ON CONTRACT, TORT. WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL ENVISION PERIPHERALS, INC. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

In the United States of America, this limited warranty is only valid for Products purchased in the Continental United States, Alaska, and Hawaii.
Outside the United States of America, this limited warranty is only valid for Products purchased in Canada.

Information in this document is subject to change without notice.
For more details, please visit:

USA: http://us.aoc.com/support/find_service_center
ARGENTINA: http://ar.aoc.com/support/find_service_center
BOLIVIA: http://bo.aoc.com/support/find_service_center
CHILE: http://cl.aoc.com/support/find_service_center
COLOMBIA: http://co.aoc.com/support/find_service_center
COSTA RICA: http://cr.aoc.com/support/find_service_center
DOMINICAN REPUBLIC: http://do.aoc.com/support/find_service_center
ECUADOR: http://ec.aoc.com/support/find_service_center
EL SALVADOR: http://sv.aoc.com/support/find_service_center
GUATEMALA: http://gt.aoc.com/support/find_service_center
HONDURAS: http://hn.aoc.com/support/find_service_center
NICARAGUA: http://ni.aoc.com/support/find_service_center
PANAMA: http://pa.aoc.com/support/find_service_center
PARAGUAY: http://py.aoc.com/support/find_service_center
PERU: http://pe.aoc.com/support/find_service_center
URUGUAY: http://pe.aoc.com/support/find_service_center
VENEZUELA: http://ve.aoc.com/support/find_service_center
IF COUNTRY NOT LISTED: http://latin.aoc.com/support/find_service_center

Downloaded from ManualMonitor.com Manuals